
Construction Summary.


For a complete construction guide of 250+ pictures, see the CD. To inquire about its availability, email davidpandersen64@msn.com.

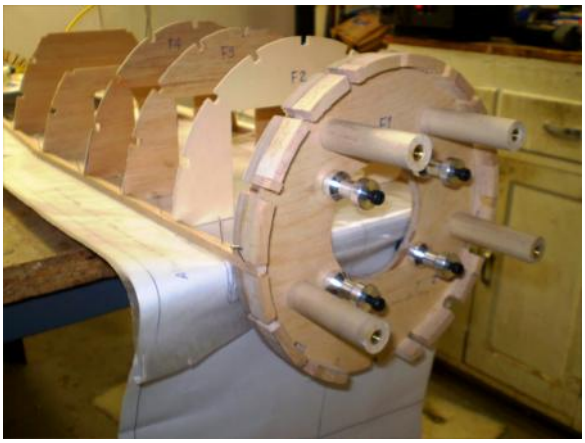


Assemble upper half of fuselage on a flat surface. Let F1 dangle over the edge.




Install cockpit stuff before sheeting fuselage.

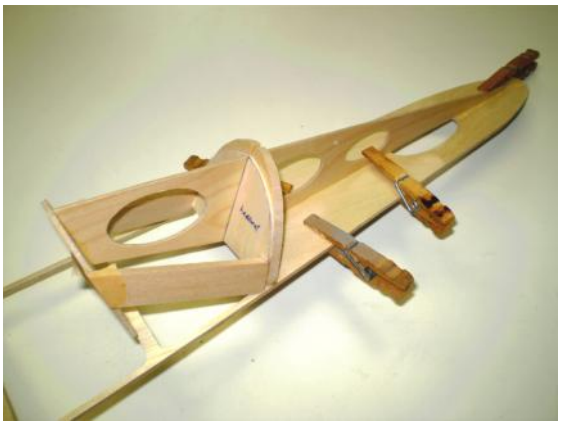


Assemble canopy frame.

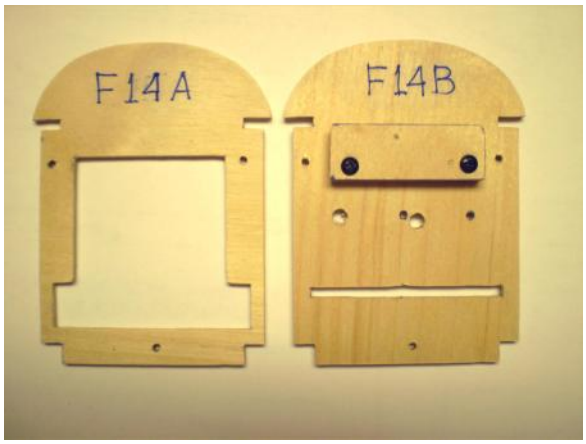


F14A, F14B screwed together during assembly.

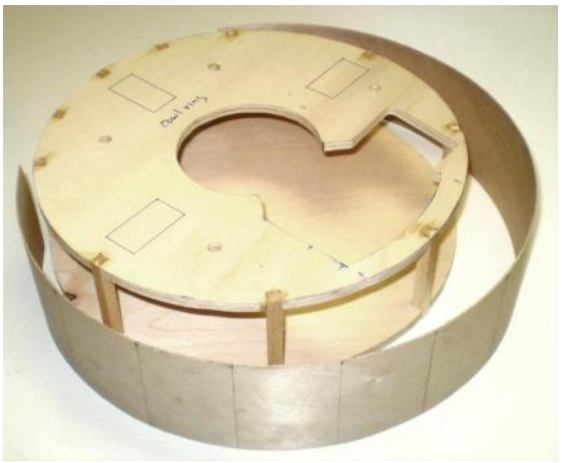


Pre-bent cowl skin ready to be attached.

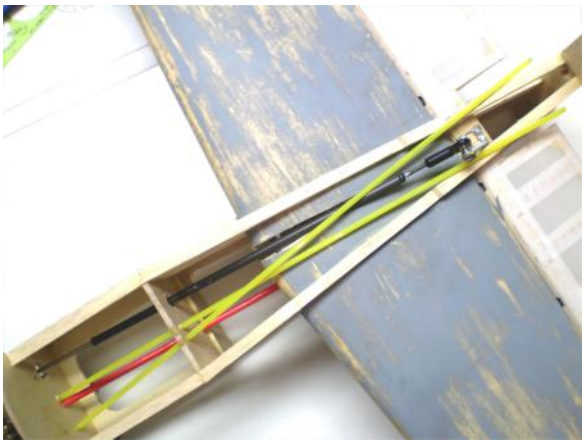

Inner NYROD rudder cable guides installed.

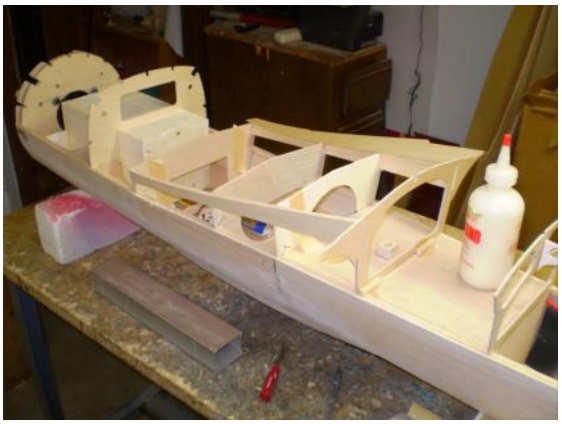

Invert fuselage, install lower formers.

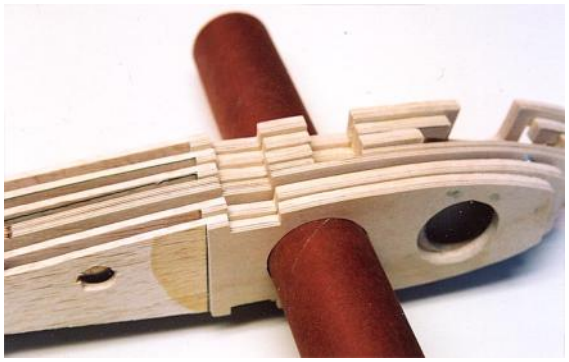

Verify fit of wing socket before assembly.





Glue retract bearers to ribs with retract attached. Cut ailerons loose w/ backless saw.





Glue aileron leading edge into aileron. Round aileron leading edge to match wing.



Center section in place, ready for top sheeting.



Align wing , drill holes for wing dowels.



Cut thru spars and socket at F8 w/ backless saw.



Install flap servo before top sheeting.



Install doors, then trim sheeting to fit.



Fit elevator hinges before final stab assembly.